


DRIVER SAFETY FEATURE GUIDE



TIRE PRESSURE MONITORING SYSTEM



IF THIS SYMBOL APPEARS – TIRES ARE DANGEROUSLY UNDER- OR OVER-INFLATED

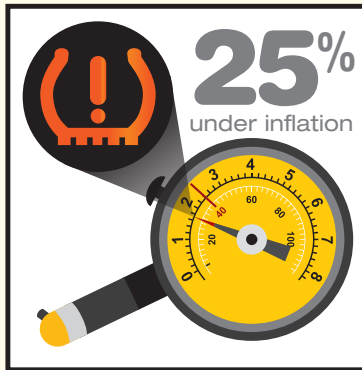

IF DRIVING, SAFELY PULL OVER TO CHECK EACH TIRE'S PRESSURE FOR UNDER- OR OVER-INFLATION

TIRE AND LOADING INFORMATION			
SEATING CAPACITY		TOTAL X	FRONT X REAR
combined weight of occupants and cargo should never exceed XXX kg or XXX lbs.			
FRONT	SIZE	COLD TIRE PRESSURE	SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION
FRONT	PXXX/XXRXX	XXXKPA, XXPSI	
REAR	PXXX/XXRXX	XXXKPA, XXPSI	
SPARE	PXXX/XXRXX	XXXKPA, XXPSI	

↑
Proper inflation

PROPERLY INFLATE TIRES TO RECOMMENDED PRESSURE